

ARKE Installation instructions for neon lights

1.


! WARNING !

- The following safety precautions are intended to prevent any injury or damage to other things, and may cause damage if the product violates precautions during use.
- 1、 Installation and inspection of the product must be carried out by a professional with an electrician's certificate.
 - 2、 Please use DC24V power supply. Please insure right positive and negative connection Do not use other power sources, such as AC220-240V.
 - 3、 All power cables should be with protection treatment. The power supply wiring should be insulated and waterproof.
 - 4、 The product should not be covered thermal insulation material or inflammables, which may cause the product to malfunction or catch fire.
 - 5、 The installation must be firm, without loosening, sagging, etc., and the product cannot be moved forcibly after installation.
 - 6、 For safety, do not look directly at the LED light source.
 - 7、 Do not use as task illumination when in building construction.
 - 8、 LED module can't be changed.


PRECAUTIONS

- Precautions for storage:
- 1、 storage temperature and humidity: 0℃-55℃ 40-70%RH
 - 2、 Do not unwarp packaging during storage. Please place in the direction indicated by the carton. Do not stack heavy objects on the packing box.
 - 3、 Please do not store the product under the following conditions:
-High humidity -High temperature -confetti and dust -sunlight exposed
-Chemicals such as strong acids, strong bases, solvents, etc
- Precautions for installation and use:
- 1、 Install in strict accordance with the instructions.
 - 2、 temperature of product use: -10℃-+40℃. Do not use under the following conditions:
-High temperature -high humidity, -dust, -sun exposure,
strong acid and strong alkali solvents,
->2000 meters high altitude, -high air pressure,
-electromagnetic influence,
-places that may cause vibration or fall
 - 3、 Random cutting, breakage, forcibly pull, twist, press and tag on the product is prohibited.
 - 4、 Quality issues caused by incorrect operation are not covered by the warranty


2.

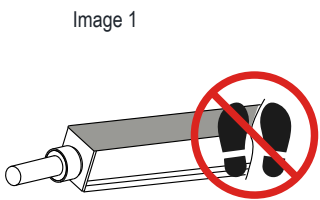


No stepping or heavy pressure

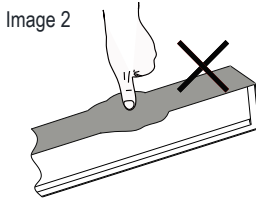


It is strictly prohibited to apply excessive pressure to the LED beads

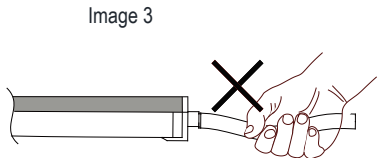


Forced pulling of the lamp body or wires is strictly prohibited

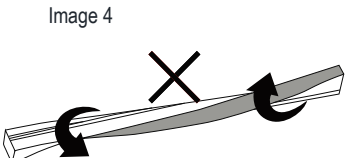

It is strictly prohibited to twist the light strip in any direction.

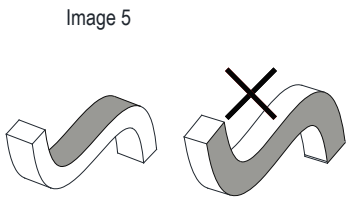

Top Bend LED Neon Strip

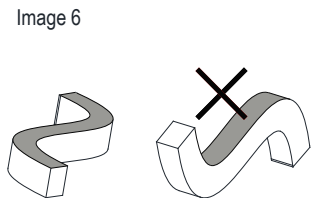


Side Bend LED Neon Strip


3.



When installing, start from one direction and never install at both ends simultaneously.

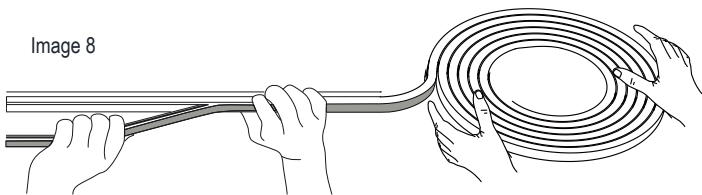

When installing a light strip longer than 2 meters, it is recommended to have at least 2 people for installation or disassembly. Do not bend it.

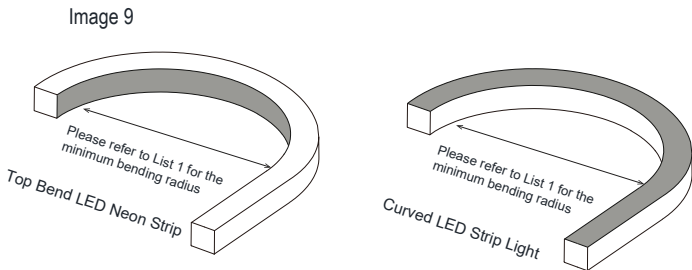


List of minimum bending radii for various specifications of light strips:


Specifications (mm)	8x12	12x16	10x20	10x10	15x15	15x18	16x19	20x20
Minimum bending radius R(mm)	50	110	110	50	110	110	110	130

4.


Schematic diagram of LED strip outlet method

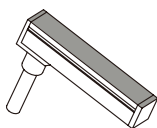

Bottom line

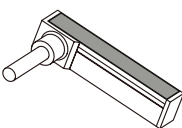

Side outgoing line

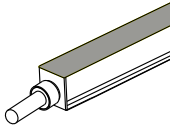


Direct line

Options



Direct line plug



Bottom outlet plug



Side outlet plug




Side outlet plug



Bottom wire aluminum groove buckle




Bottom wire aluminum groove



PVC installation buckle



PVC installation groove



Curved mounting groove



588STglue



Flat mounting Aluminum clip



Flat mounting aluminum groove




Waterproof male and female connector, 4 core/5 core

5.

I Fixed Type

1、 Installation method of aluminum groove/bending groove



Top bend



Aluminum groove



Flexible groove

01



Confirm location

02



Fix with screws

03



Insert the strip

04



Finish installation

01



Confirm location

02



Fix with screws

03




Insert the strip

04



Finish installation

Ensure that the wall has sufficient support strength when splicing aluminum grooves, Suggest installation gap range of 20-30mm





20~30mm


6.

II Cut

Please cut as follows:

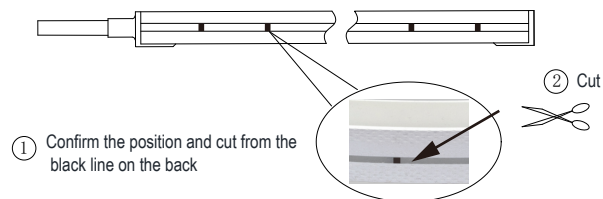


 **Attention, please:**
After cutting, the cut position needs to be insulated and glued.
The protection level can only reach IP44.
After cutting the light strip, we need to use our matching plug for waterproof treatment and cutting
Improper rear waterproofing, company does not provide warranty

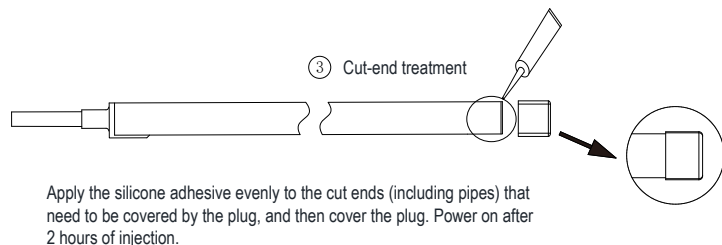


7.

III Driver installation and wiring

1.RGB/RGBW strip light

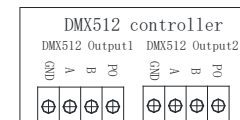


DMX512 Signal Input Connector

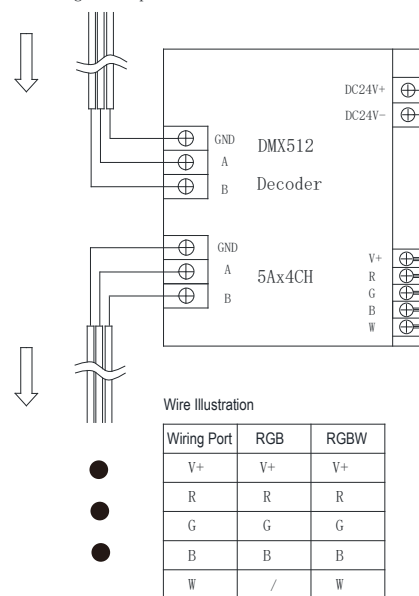

As shown, each decoder is connected with 15 meters and needs to be divided into 3 circuits with separate leads

8.

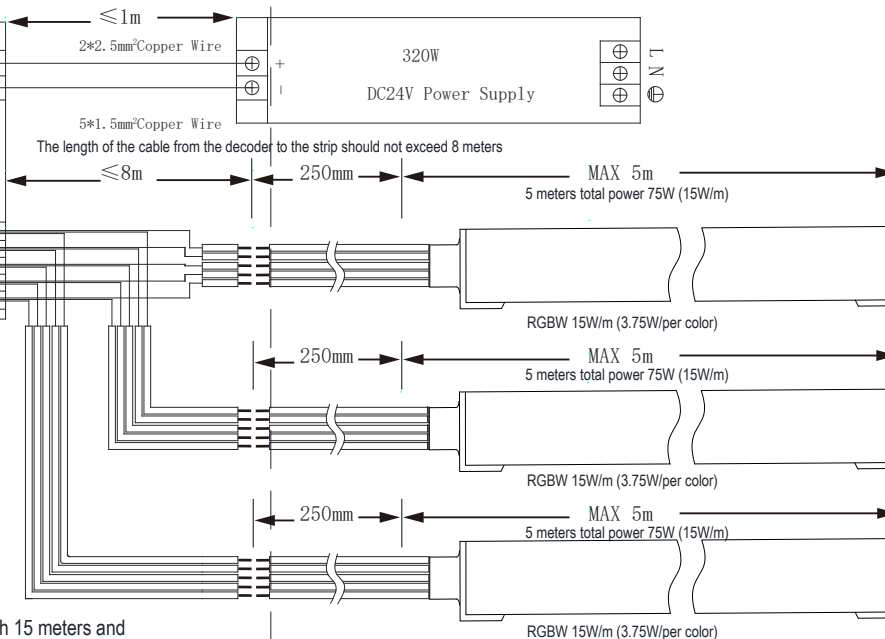


9.

NOTES:

- 1、 It is recommended to reserve 20% of the power supply. As shown, with 320W power supply, and 15W/m strip, the actual load is rounded to 15 meters instead of 17 meters.
- 2、 It is recommended to reserve 20% for the decoder. As shown, each channel of the decoder is 5A, and each channel can be loaded $(24V \times 5A) \times 80\% = 96W$
For RGBW light with a single color of 3.75W, the maximum load can be 25 meters
Since the decoder is used in conjunction with the 24V driver, the minimum meters of the two should be taken, and the actual loading should be 15 meters.
- 3、 When connection length of strip is over 5 meters, it should be led from another the decoder port.

2.Wiring connections for RGB/RGBW/WWW with pixel control

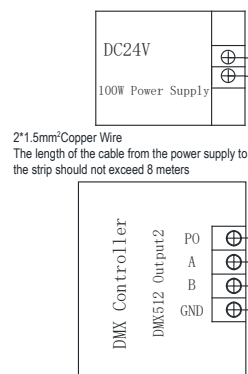

Wire Illustration among power supply, controller and strip light


24V power supply	Connection Port	RGB/RGBW Strip light
DC24V+	/	DC24V+
/	ADRI/PO	TI
/	DMX+/A	A
/	DMX-/B	B
DC24V-	GND	DC24V-

NOTES:

- 1、 It is recommended to reserve 20% of the power supply. As shown, with 100 power supply, and 15W/m strip, the actual load is rounded to 5 meters
- 2、 The maximum length of the light strip is 5 meters. If the length exceeds 5 meters, a separate DC24V power supply is required. For lights powered by different power supplies, DC24V+ cannot be connected together.
- 3、 The length of the light strip that the controller can carry is determined by the specifications of the controller
- 4、 Do not reverse input and output end when connecting

10.

CAUTIONS:
There are input and output in the strip light, please connect the controller port to the input end
There are arrow marks on the FPC board

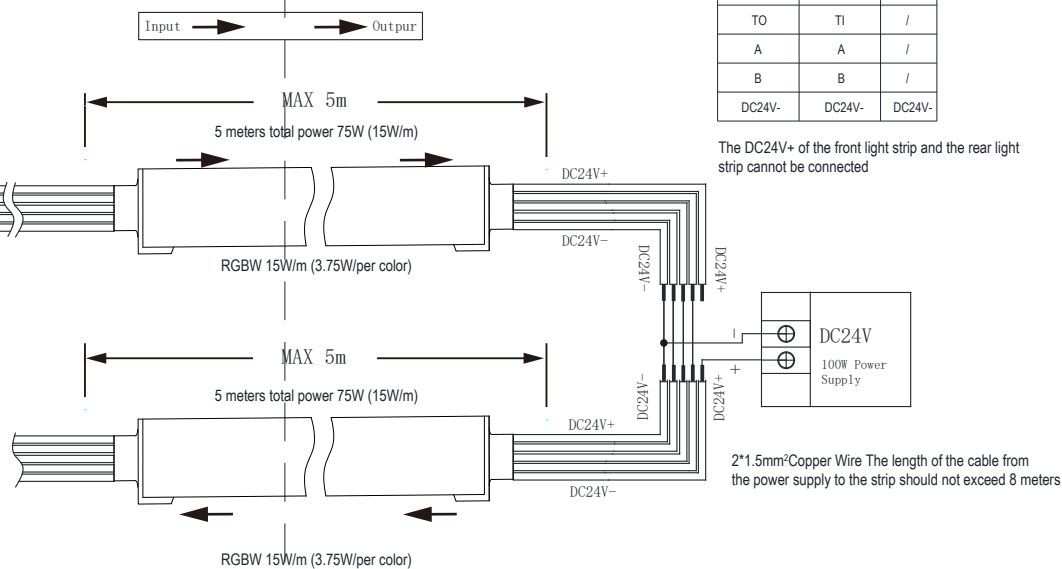

Wire Illustration between strip lights

The first strip light	The rear strip light	24V power supply
/	DC24V+	DC24V-
TO	TI	/
A	A	/
B	B	/
DC24V-	DC24V+	DC24V-

The DC24V+ of the front light strip and the rear light strip cannot be connected

2*1.5mm²Copper Wire The length of the cable from the power supply to the strip should not exceed 8 meters

CAUTIONS:

- 1、 Turn off the power before installing or handling the product.
- 2、 Make sure the power supply and the strip light are firmly fixed
- 3、 Do not reverse polarity when connecting.
- 4、 Double check all connections before turning on power and the exposed wire ends need to be waterproof and insulated.
- 5、 It is recommended to reserve at least 20% of the power supply and non-isolated power supplies cannot be used

11.

Maintenance

- to ensure the stable use of the product and prolong its service life, regular inspection and cleaning is needed
- Cleaning and inspection at least every 3 months with power off

Inspection Method

- Whether driver and chips work well
- Whether there is unusual smell, sound or heat.
- Whether there are breakage, or looseness, etc. If an abnormality is found, please immediately power off and stop using, and eliminate the abnormality in time.

Cleaning

- Gently wipe the product with a soft cloth.

12.